

## "08" - Error with the hall sensor

Error code	Cause	Result
08	Error with the hall sensor.	The display shows the error code 08.

### Component Description

The Hall sensor is used to drive the motor smoothly and continuously as the electronic switch.

### Component Location

The Hall sensors are installed on the stator of motor.

### Conditions for Running the Diagnostics

After the system is turned on, the diagnosis runs continuously.

### Error Phenomenon

The display shows the error code 08.

### Conditions for Clearing the Error Code

After the diagnosis runs and passes, the system works normally.

### Troubleshooting

Step 1 Check all the connectors from the motor (Only for FM & RM).

Check the cable and the connectors from motor for the following conditions:

Inspect the cable and connector pins for the following:

- Loose connector
- Corroded pins
- Bent or broken pins
- Dirt or debris in or on the connector pins
- Wire insulation damage
- Connector shell broken

Specification	Solution
Correctly connected	Replace the motor.
A damaged connection has been detected in the harness connector.	Clean the connector and pins. Repair the damaged harness, connector, or pins, if possible.

Step 2 Clear the error code

Conditions: Connect all components, Turn on the system.

Specification	Solution
Error code 08 is inactive.	Repair complete.
Error code 08 is active.	Return to the step 1 or contact BAFANG if all steps have been completed and checked again.