

## "12" - Over current of motor

Error code	Cause	Result
12	Controller current sensor fault.	The display shows the error code 12 and the motor cannot work.

### Component Description

The controller current sensor is used for overcurrent protection.

### Component Location

The controller current sensor is installed in the controller.

### Conditions for Running the Diagnostics

After the system is turned on, the diagnosis runs continuously.

### Error Phenomenon

The display shows the error code 12 and the motor cannot work.

### Conditions for Clearing the Error Code

After the diagnosis runs and passes, the system works normally.

### Troubleshooting

Step 1 Replace the controller.

Step 2 Clear the error code

Conditions: Connect all components, Turn on the system.

Specification	Solution
Error code 12 is inactive.	Repair complete.
Error code 12 is active.	Return to the step 1 or contact BAFANG if all steps have been completed and checked again.